

PMP-SW400

ELECTRONIC PRESSURE SWITCHES AND TRANSMITTER SERIES

(BASED ON THE C100 SERIES)



- OPTIMISED FOR MIDDLE AND HIGH PRESSURE MEASUREMENT
- APPLICABLE FOR GASEOUS AND LIQUID MEDIA
- MICROPROCESSOR SIGNAL CONDITIONING
- PRESSURE OFFSET CORRECTION IS AVAILABLE
- SWICHTING POINT CONFIGURABLE BY INTEGRATED PUSHBUTTONS

MAIN FEATURE

- Pressure ranges: from -1...3 bar to -1...2000 bar
- Mechanical connections*: G 1/4" Form E; 1/4"-18 NPT
- Housing: 100x66x45 mm ALU Housing with PC transparent cover
- Electrical connection: PCB Mount Terminal Block, 3-pole
- OUTPUT 1: analog 4..20 mA 3 Wires or 0 .. 10 V
- **OUTPUT 2:** switching outputs: 2 Relay with 1 x Form C
- Accuracy (25°C): typ ≤ 0.5% FS



*others on request

DESCRIPTION

Series of electronic pressure switches and transmitters for industrial applications with high accuracy requirements over a wide temperature range, designed to measure pressure in gases and liquids. These devices are used in pneumatics, hydraulics and process engineering. The PMP-SW400 allows zero point correction via a push button on the printed circuit board. Also allows Switching point from 1 % to 99% from measurement range to configure

APPLICATION



ENERGY TECHNOLOGY



INDUSTRIAL PROCESS CONTROLE Chemical, Pharma, Food



BUILDING AUTOMATION SYSTEMS



GAS INDUSTRY



HVACHeating, Ventilation,
Air conditioning



CHEMICAL INDUSTRY


TECHNICAL SPECIFICATIONS

INPU	T PARAMETERS
Pressure type	gauge
Mechanical connections *	G 1/4" Form E; 1/4"-18 NPT
Wetted parts	stainless steel 316L or 17-4 PH
Tightening torque	typ 25 Nm
Housing	100x66x45 mm ALU Housing, with PC transparent cover
CHARACTERISTICS FOR SWITCHING OUTPUTS	
Electrical connections	PCB Mount Terminal Block, 3-pole over PG M16 wire gauge max. 1,5 mm² / AWG16
Output1	420 mA 3 wires 0/15 V 010 V
Supply voltage	18 28 V DC; 10 16 V DC on request ≥ 2 kOhm ≥ 2 kOhm
Load resistance	
Output2	2 x relay with 1 x form C each
Switching Points	1 99 % of measuring range; independent for each relay
Hysteresis Points	1 99 % of measuring range; independent for each relay
Max switching current*	30 VDC/ 1 A or 30 VAC/ 0,5 A
Response time	100 ms
CHARACTERISTICS FOR ANALOG OUTPUT	
Accuracy (25°C)	typ ≤ 0.5% FS
Overall accuracy (- 10°C80°C)	typ ≤ 2 % FS
Long-term stability	≤ 0.2 % FS per year in referential conditions
Ambient temperature	- 20+ 80°C
Medium temperature	- 25+ 120°C
Storage temperature	- 20+ 80°C
Protection class	IP65
Zero point setting	manually via a push button on display (see Page4)
ELECTRICAL PROTECTION	
REVERSE POLARITY	YES
CE CONFORMITY	89/336/EWG Electromagnetic compatibility
	OTHER
WEIGHT**	~ 250 g


^{*}other on request
**depend of product version

PRODUCT CONSTRACTION


All dimensions are in mm

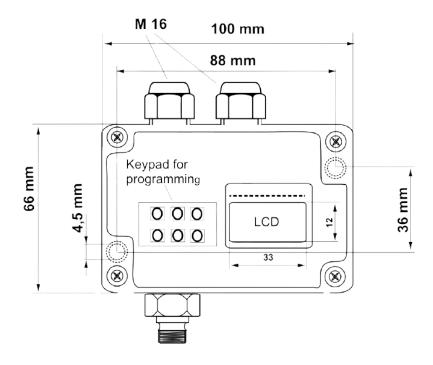

ELECTRICAL CONNECTION

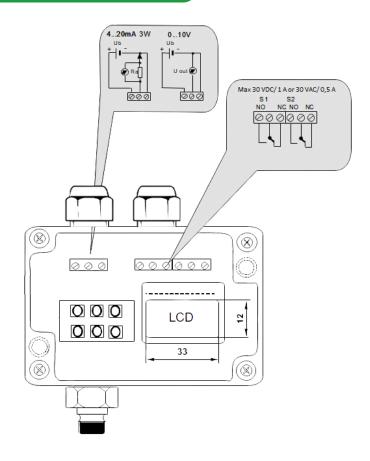

HOW TO SET UP

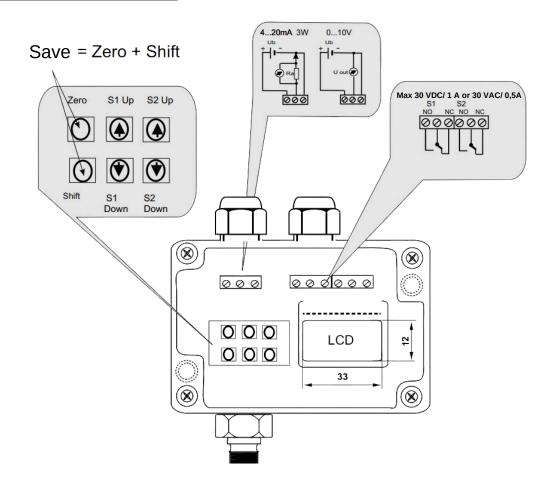

Programming switching point 1:

- 1) Press **S1 Up** to increase the switching point 1 value. Display shows the switching point 1 value and unit.
- 2) Press **S1 Down** to decrease the switching point 1 value. Display shows the switching point 1 value and unit.
- 3) To save the point 1: **Press Zero** + **Shift.**

Programming switching point 2:

- 1) Press **S2 Up** to increase the switching point 2 value: Display shows the switching point 2 value and unit.
- 2) Press **S2 Down** to decrease the switching point 2 value: Display shows the switching point 2 value and unit.
- 3) To save the point 2: Press Zero + Shift.

Programming hysteresis point 1:

- 1) Press **Shift** (permanent) + **S1 Up** or **S1 Down.** Display shows the first hysteresis value and unit.
- 2) Keep pressing **Shift** with **S1 Up** to increase the value or **S1 Down** to decrease the value.
- 3) To save the hysteresis point: Press Zero + Shift.

Programming hysteresis point 2:

- 1) Press **Shift** (permanent) + **S2 Up** or **S2 Down**. Display shows the second hysteresis value and unit.
- 2) Keep pressing Shift with **S2 Up** to increase the value or **S2 Down** to decrease the value.
- 3) To save the hysteresis point: Press Zero + Shift.

Setting pressure offset point:

To correct the value of pressure offset in the device, please make sure that the pressure in the pressure canal 0 bar and then press **Zero.**



Befor installation and operation, ensure that the appropriate pressure sensor has been selected in terms of pressure range, design and specific measuring conditions. Non compliance can result in serious injure and/or damage to the equipment.

WARNING: Prignitz Mikrosystemtechnik reserve the right to modify their products without notice. It is imperative that we should be consulted over any particular use or application of our products and it is the responsibility of the buyer to establish, particularly through all the appropriate testes, that the product is suitable for the use or application. Under no circumstances will our warranty apply, nor shall we be held responsible for any application (such as any modification, addition, deletion, use in conjunction with other electrical or electronic components, circuits or assemblies, or any other unsuitable material or substance) which has not been expressly agreed by us prior to the sale of our products.

APPROVALS CERTIFICATE

CE Compliance: EMC directive 2014 / 30 / EU according in EN 61326-2-3

RoHS guideline: 2011/65/EU

Approved according to the European Directive EC79/2009

PRIGNITZ-Mikrosystemtechnik GmbH is certified acc. to ISO 9001. We offer a multitude of products compliant with ATEX, IECEx, CSA, and other worldwide relevant qualifications.















CUSTOMIZED SOLUTIONS

An indisputable advantage of the products from Prignitz Mikrosystemtechnik is that in addition to the specified parameters, a variety of specific customer requests can be implemented:

- EX versions are available for use in hazardous areas (ATEX, IECEx, CSA)
- other process and electrical connections available in a wide range of options
- analog output signals can be customized upon request.

Feel free to ask us. We are ready to implement individual solutions for you.

TRANSPORT, PACKAGING AND STORAGE

Transport

Check the pressure transmitter for any damage that may have been caused during transportation. Obvious damage must be reported immediately.

Packaging and storage

Do not remove packaging until just before mounting.

Keep the packaging as it will provide optimum protection during transport (e.g. change in installation site, sending for repair).

Permissible conditions at the place of storage:

• Storage temperature: -20 ... +80 °C

DISMOUNTING, RETURN AND DISPOSAL

Dismounting

Physical injuries and damage to property and the environment caused by hazardous media Upon contact with hazardous media (e.g. oxygen, acetylene, flammable or toxic substances), harmful media (e.g. corrosive, toxic, carcinogenic, radioactive), and also with refrigeration plants and compres- sors, there is a danger of physical injuries and damage to property and the environment.

- Should a failure occur, aggressive media with extremely high temperature and under high pressure or vacuum may be present at the instrument.
- Wear the requisite protective equipment.

Dismounting the instrument

- Depressurise and de-energise the pressure transmitter.
- Disconnect the electrical connection.
- Unscrew the pressure transmitter with a spanner using the spanner flats.


Return

Strictly observe the following when shipping the instrument:

All instruments delivered to Prignitz Mikrosystemtechnik must be free from any kind of hazardous substances (acids, bases, solutions, etc.) and must therefore be cleaned before being returned.

Edition version: D/PMP-SW400/Rev.3/August.2024/ENG

HOW TO ORDER

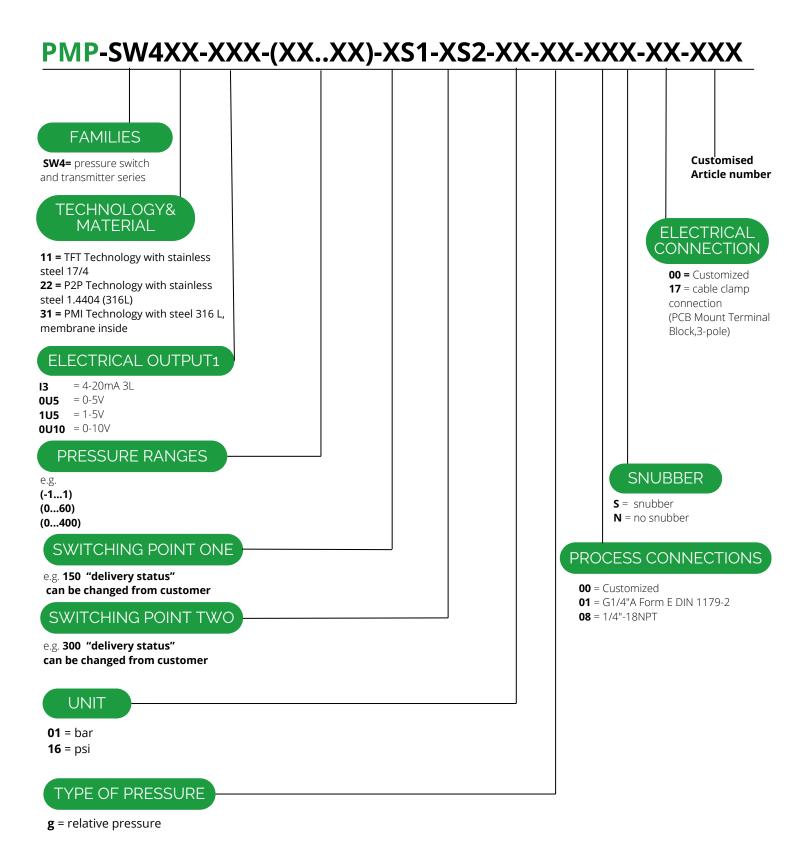

^{*} customisation available on request



MIKROSYSTEMTECHNIK









© 2024 PRIGNITZ Mikrosystemtechnik GmbH All rights reserved. / Alle Rechte vorbehalten.

CONTACTS:

Tel.: **+49 (0) 38 77 / 5 67 46-0**

Fax: **+49 (0) 38 77 / 5 67 46-18**Margarethenstraße 61

19322 Wittenberge / Elbe Germany

info@prignitz-mst.de